

VersaStat Installation



1) Decide on optimum location of VersaStat Pad.


For best results place on floor in front of electronic devices such as file servers, home audio, copy machines or any static sensitive devices. For computer work station protection or for electronic assembly place VersaStat Pad directly under feet in front of chair.

Remember: The more you come into direct contact with the VersaStat Pad the better it performs. If you are using the VersaStat to drain

static from a carpeted room, lightly mist the VersaStat Pad and surrounding carpet with UltraSpray (included in your VersaStat Kit). Make sure to observe "directions for use" on UltraSpray bottle.

2) Peel Backing from releasable adhesive located on the underside of the VersaStat Pad. Place pad adhesive side down on floor and firmly smooth in place. The UltraStat 2000 Releasable adhesive attaches to plastic, vinyl, concrete, carpeting (virtually ANY surface) and won't leave a sticky residue when removed at a later date!

3) Ground the Patented Electrostatic Collection / Display unit as shown:

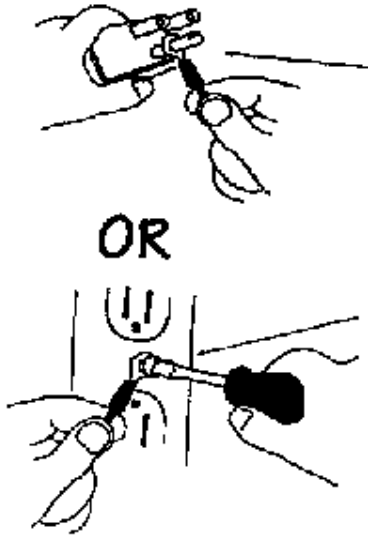

- Slip red ring eyelet over third prong plug of 3 prong power cord and plug back into grounded AC outlet.
- Carefully remove center screw of face plate cover, place screw through red ring eyelet and replace in face plate cover. Note: Turning off power to outlet is recommended for this method.

4) Attach the electrostatic collection/ display unit to any convenient location making sure to rout cords safely to avoid any tripping hazard.



4916 26th Street West, Suite 100, Bradenton, Florida 34207

Toll Free 877-GND-ZERO (463-1376), **Direct Phone** 941-751-7581 **Fax** 1-941-751-7586

Email sales@gndzero.com

http://www.gndzero.com